



Models 123 124 129 201

## Special tools

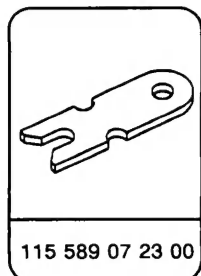


Insert slip gauge as far as possible between clutch housing and slave cylinder and note position of notches (arrow) in gauge.

If notches are not visible:  
Clutch disk wear is acceptable.

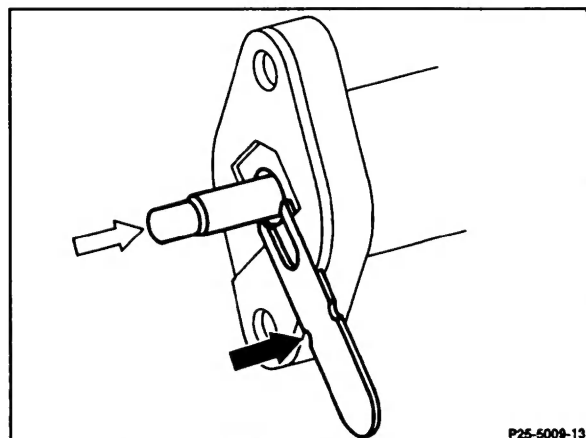

If notches are visible:  
**Wear limit of disk has been reached.**

**Replace clutch disk.**

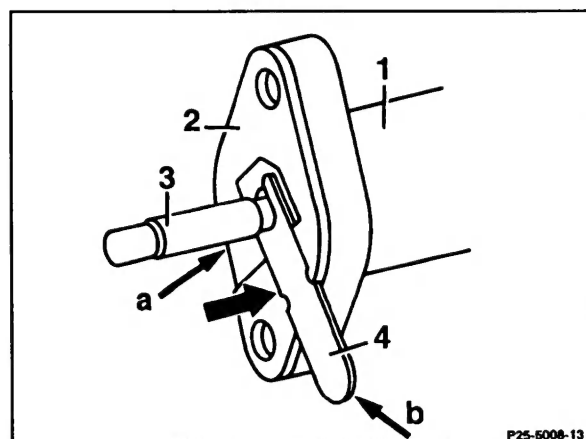

- 1 Slave cylinder
- 2 Shim between slave cylinder and clutch housing
- 3 Actuating rod
- 4 Slip gauge